



Left - sends the left recorder output to the mixer (good for split-track playback)  
 Right - sends the right recorder output to the mixer (good for split-track playback)  
 Left+Right - combines both recorder output channels to mono signal for the mixer  
 Record - sends mono output of mixer to both left and right recorder inputs  
 Prevents a recorder loop-thru that can cause feed-back

ISS		
<b>Recorder Selector Switch</b>		
Robert Lewis	Rev 1.0	Page 1 of 1
	9/22/2003	